



## SET UDS/USB

- Smooth read-in and read-out of data of the USP-PI
- Creation of profiles in MS Excel®
- Graphic representation of the shaft copy
- Copying data between multiple UPS-PI
- Archiving of shaft copies
- Connection through USB or RS-232 interface

Schmersal Canada Ltd., 29 Centennial Road, Unit 1, Orangeville, Ontario L9W 1R1 Canada

The details and data referred to have been carefully checked. Images may diverge from original. Further technical data can be found in the manual. Technical amendments and errors possible.

Generated on: 2024-10-03, 5:33 p.m.