



EN Operating instructions.pages 1 to 2
Original

 
 
Destination and use

Different actuator forms are available. The actuators BO and BOW are preferably used for sliding and removable safety guards; the actuators BOR, BOWR, BOF/HIS.1 und BOF/HIS.2 for hinged guards. All actuators have 8 mm play in actuating direction.



- The actuators must be permanently fitted to the safety guards and protected against displacement by suitable measures (tamperproof screws, welding, pinning, rivetting).
- The actuators described in this manual are not suitable for use in explosive atmospheres.

Mounting


For fitting onto hinged safety guards, please ensure that the point of rotation of the hinge and the top surface of the safety switch plus d mm are in a parallel plane (see table).
The BOF/HIS.1 and BOF/HIS.2 actuators must be fitted so that they are protected against soiling (e.g. dust, sand and chips).

Actuating radii				
	R_min [mm] x [mm]		R_min [mm] x [mm]	
BO	400	28	700	28
BOW	400	22	700	22
BOR	350	28	—	—
BOWR	350	22	—	—
BOF/HIS.1	400	55	650	55
BOF/HIS.2	400	49	650	49

  Legend


-  Radii over the wide edge of the actuator
-  Radii over the small edge of the actuator

Distance to the device head 5...13 mm

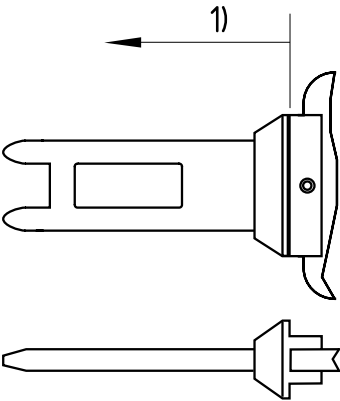


Dimensions
All measurements in mm.


BO

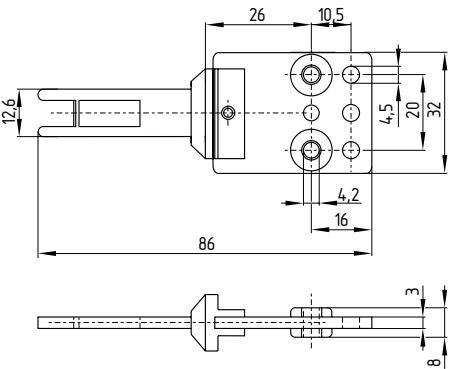


BOW

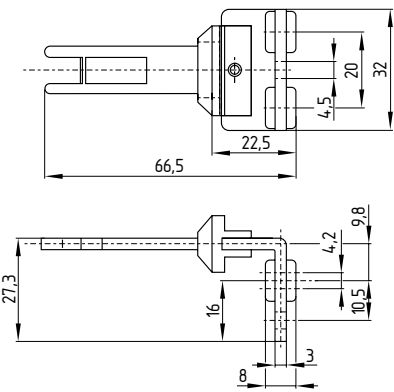


BOR

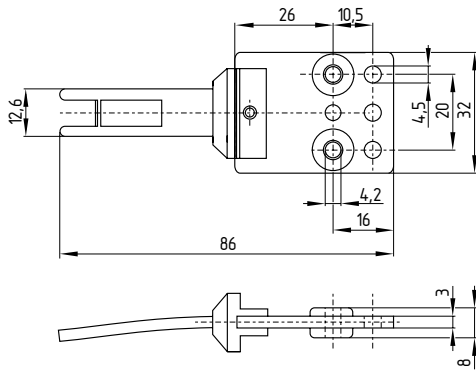

BOWR

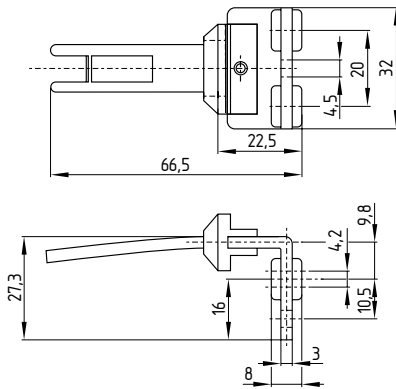

BOF/HIS.1

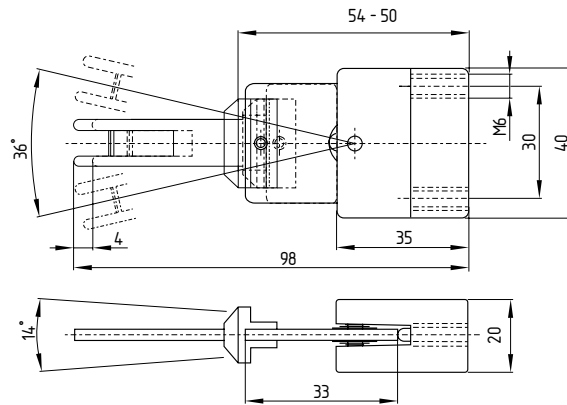

BOF/HIS.2

