

1. Montageanweisung / Installation Instructions / Notice de montage / Istruzioni per il montaggio / Instrucciones de montaje /

1.1	ASLT-200	AS-i-Busabschluss AS-i Bus Termination Terminaison de bus AS-i Terminazione di bus AS-i Terminación de bus AS-i
-----	-----------------	---



<http://www.schmersal.net>



ASLT-200



Extended search




Die Geräte dürfen nur von Fachpersonal aufgebaut, angeschlossen und in Betrieb genommen werden! / Only qualified staff is allowed to mount, connect and set up the modules! / Les modules ne doivent être montés, raccordés et mis en service que par du personnel qualifié! / Gli apparecchi possono essere montati, collegati e messi in funzione soltanto da personale specializzato! / Los aparatos sólo pueden ser montados, conectados y puestos en servicio por personal técnico especializado!

1.2 Abmessungen // Dimensions // Dimensions // Dimensioni // Dimensiones




1.3 Frontansicht und Anschlüsse // Front view and connections // Vue de face et raccordements // Vista frontale e collegamenti//Vista frontal y conexiones

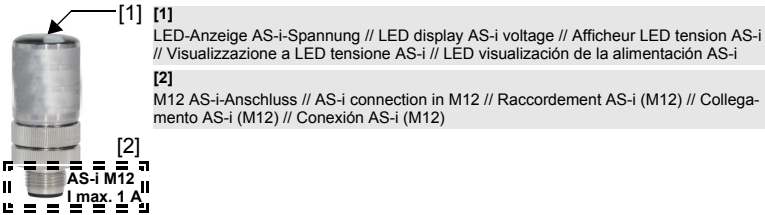

LEDs	Status	Signal
		U AS-i < 19 V
grün //green //verte //verde		U AS-i > 26 V
gelb // yellow //jaune //giallo // amarillo		U AS-i > 19 V


LED an // on // allumée // on // en LED blinkend // flashing // clignotante // ampeggiante // el destellar / LED aus // off // éteinte // fuori // fuera /

1.4 Leitungsverlängerung / Line extension / Extension réseaux / Estensione del la linea/ Extensión línea

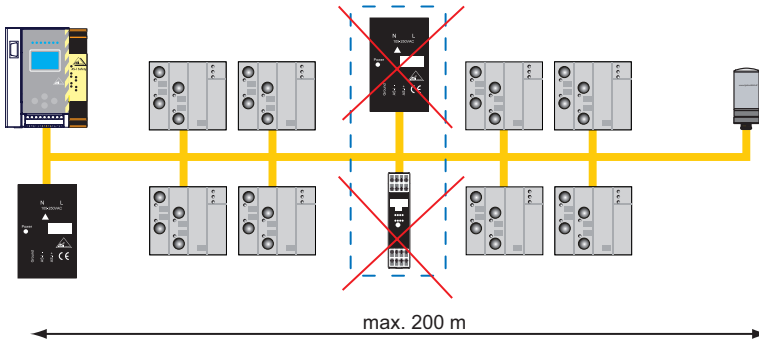

Max. 1 Leitungsverlängerung pro Segment / Max. 1 line extension per segment / Max. 1 extension réseaux par segment / Max. 1 estensione del la linea per segmento / Max. 1 extensión línea por segmento

1.5 Inbetriebnahme / Startup / Mise en service / Messa in servizio / Arranque

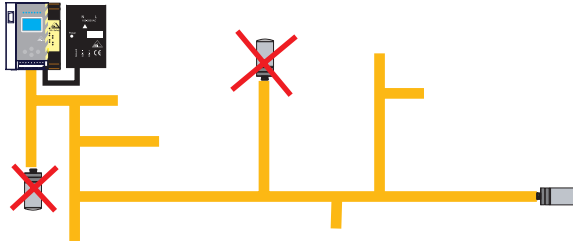

Am Leitungsende anschließen! / Attach at the line end! / Fixation à l'extrémité de la ligne! / Fissare all'estremità della linea! / Fijación al final de la línea!



Max. 1 Leitungsverlängerung pro Segment / Max. 1 line extension per segment / Max. 1 extension réseaux par segment / Max. 1 estensione del la linea per segmento / Max. 1 extensión línea por segmento

1.6 Montage / Montage / Montage / Montaggio / Montaje

