

Wiring table

SRB 206 SQ and SRB 206 ST

Connection of:	NC contact:	Contacts:	Bridges:
1 guard door	NC contact 1 NC contact 2	S11/S12 S71/S122	S11/S22 and S31/S32/S42 and S51/S52/S62
2 guard doors	NC contact 1 NC contact 2 NC contact 3 NC contact 4	S11/S12 S71/S72 S11/S22 S72/S122	S31/S32/S42 and S51/S52/S62
3 guard doors	NC contact 1 NC contact 2 NC contact 3 NC contact 4 NC contact 5 NC contact 6	S11/S12 S71/S72 S11/S22 S72/S82 S31/S32 S82/S122	S31/S42 and S51/S52/S62
4 guard doors	NC contact 1 NC contact 2 NC contact 3 NC contact 4 NC contact 5 NC contact 6 NC contact 7 NC contact 8	S11/S12 S71/S72 S11/S22 S72/S82 S31/S32 S82/S92 S31/S42 S92/S122	S51/S52/S62
5 guard doors	NC contact 1 NC contact 2 NC contact 3 NC contact 4 NC contact 5 NC contact 6 NC contact 7 NC contact 8 NC contact 9 NC contact 10	S11/S12 S71/S72 S11/S22 S72/S82 S31/S32 S82/S92 S31/S42 S92/S102 S51/S52 S102/S122	S51/S62
6 guard doors	NC contact 1 NC contact 2 NC contact 3 NC contact 4 NC contact 5 NC contact 6 NC contact 7 NC contact 8 NC contact 9 NC contact 10 NC contact 11 NC contact 12	S11/S12 S71/S72 S11/S22 S72/S82 S31/S32 S82/S92 S31/S42 S92/S102 S51/S52 S102/S122 S51/S62 S112/S122	none