



Operating instructions . . . . . . . . . . . . . . . . . . pages 1 bis 4

## 1. About this document

## 1.1 Function

This operating instructions manual provides all the information required for the mounting, set-up and commissioning to ensure the safe operation and disassembly of the switchgear. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

### 1.2 Target group: authorised qualified personnel

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

### 1.3 Explanation of the symbols used



**Information, hint, note:** This symbol indicates useful additional information.

 $\wedge$ 

**Caution:** Failure to comply with this warning notice could lead to failures or malfunctions. **Warning:** Failure to comply with this warning notice could

lead to physical injury and/or damage to the machine.

## 1.4 Appropriate use

The Schmersal range of products is not intended for private consumers.

The product must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

### 1.5 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country specific installation standards as well as all prevailing safety regulations and accident prevention rules.

ſ	•	٦
	1	
0	allina	

..1 ..1

. . 1

..1 ..1

. . 1

. . 1

. .2

. .2

. .2

. .2

. .2

. .2

. .3

. . 3

..3

..3

. .3

. .3

..3

Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: products.schmersal.com.

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

### 1.6 Warning about misuse



In case of inadequate or improper use or manipulations of the component, personal hazards or damage to machinery or plant components cannot be excluded.

### 1.7 Exclusion of liability

We shall accept no liability for damages or malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden, the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

Content
1   About this document     1.1   Function
1.2 Target group: authorised qualified personnel.   1.3 Explanation of the symbols used.
1.4 Appropriate use
1.5 General safety instructions
1.6 Warning about misuse   1.7 Exclusion of liability
2 Product description
2.1 Ordering code   2.2 Special versions
2.3 Purpose and use
2.4 Technical data
3 Assembly
3.1 General mounting instructions
3.2 Assembly layout.
3.3 Dimensions
4 Electrical connection
4.1 General information for electrical connection.
4.2 Contact Options
5 Set-up and maintenance
5.1 Functional testing.
5.2 Maintenance
6 Disassembly and disposal
6.1 Disassembly
6.2 Disposal
7 EU Declaration of conformity
S SCHMERSAL



## 2. Product description

### 2.1 Ordering code

This operating instructions manual applies to the following types:

## **TQ 900-**①

Option	Description
11 13 22 02	1 NO contacts / 1 NC contacts 1 NO contacts / 3 NC contacts 2 NO contacts / 2 NC contacts 2 NC 4 NC
	1  3 22

### 2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

### 2.3 Purpose and use

Pull-wire switches are used on machinery and plants, where triggering the switching command must be enabled at arbitrary points on the wire run. If the tensioned pull-wire is pulled or in case of wire breakage, the switching function of the pull-wire switch is activated. (refer to image 1).

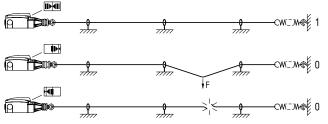


Image 1: Position indication and actuation

# Design/operating principle

The pull-wire switches of the TQ 900 series are brought into the operational condition by the proper pre-tensioning of the wire. Up to two switching elements located on the inside of the switch have either 2 or 4 contacts, whereby the NC contacts are closed and the NO contacts are opened in tensioned condition.



The pull-wire switch does not meet the requirements of EN ISO 13850 and EN 60947-5-5.

## 2.4 Technical data

Standards: EN 60947-5-
Enclosure: GD-Zn alloy, pain
Cover: thermoplastic
Degree of protection: IP65, IP67 to EN 6052
Contact material: silve
Switching system: Change-over contact with double break, 1 to 4 NO
contacts; slow action with positive break NC contacts
Connection: screw terminals
Cable section: max. 2.5 mm <sup>2</sup> (incl. conductor ferrules
Cable entry: 3 x M20 x 1.
Rated impulse withstand voltage U <sub>imp</sub> : 6 kV
Rated insulation voltage U <sub>i</sub> : 500 V
Thermal test current I <sub>the</sub> : 67
Rated operating current/voltage Ie/Ue: 4 A / 230 VAC
1 A / 24 VDC
Utilisation category: AC-15, DC-13
Required short-circuit current: 1,000 /
Max. fuse rating: 6 A gG D-fuse (EN 60269-1
Ambient temperature: -25 °C +70 °C
Relative humidity: 30 95%, non condensing, non icing
Wire length: max. 75 m depending in relation to the
range of ambient temperature (see image 3
Mechanical life: >1 million operations

AWG 14. Solid/Stranded. Max. torque: 7 in. lb. Use copper conductors only.

# 3. Assembly

### 3.1 General mounting instructions

The installation may only be carried out by authorised personnel. The pull-wire switch is fitted by means of two screws (distance of the drill holes 40 mm or 48 mm).

### 3.2 Assembly layout

For tensioned span lengths up to 10 m, intermediate wire supports are required every 3 to 5 m. To avoid resonance vibrations in the wire on machines with high vibrations, it is recommended to realise the individual support length differently.



The maximum perpendicular traction force to be exercised on the wire in order to activate the emergency pull-wire switch is 200 N, the maximum deflection is 400 mm. Sufficient space must be provided so that the required actuating deflection can be reached.

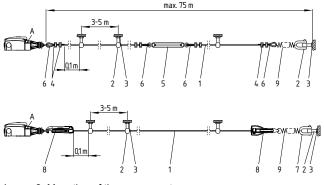


Image 2: Mounting of the components

### Key

2

3

- Α Position indication
- 1 Pull-wire with red PVC sheath Ø 5 mm (steel core: Ø 3 mm)
  - Eyebolt
  - Nut
- 4 Wire clamp 5
- Tensioner
- 6 Wire thimble 7
  - Shackle
- 8 S900 wire tensioner Tension spring ACC-RS900-TS 9

We recommend the use of the ACC-RS900-TS tension spring to attenuate the effects of temperature variations.

Due to the thermal expansion behaviour of the wire, the maximum authorised wire length is determined by the ambient temperature range (refer to image 3).

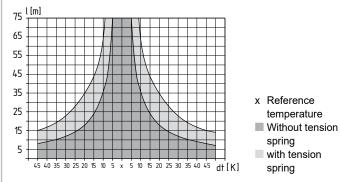


Image 3: Temperature-dependent maximum wire length with or without tension spring

The pull-wire must be fixed to the ring and then be pre-tensioned until the position indication is in the central position (refer to image 1).

# Operating instructions Pull-wire switches

As the thimbles are subject to deformation in case of wire pull, the wire should be pulled several times after fitting. After that, the wire must be re-tensioned (see image 4).




Image 4: Thimble deformation


In order to ensure an optimal operation safety and to save time during fitting, we recommend using the wire rope and the combined fixing and tensioning system from Schmersal. Alternatively, wire thimbles and wire clamps can be used in conjunction with a tensioner. In this case, the red PVC sheet must be removed in the clamp area prior to installing the wire rope.

# 3.3 Dimensions

All measurements in mm.

# TQ 900

i

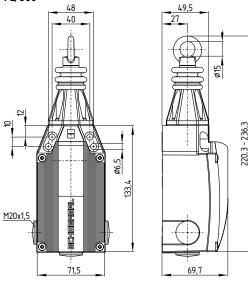

# Key

A Position indicator

# 4. Electrical connection

# 4.1 General information for electrical connection

The electrical connection may only be carried out by authorised personnel in a de-energised condition.

- 1. Cover screws must be loosened
- 2. Dust shield cap remove
- 3. Cable glands M20 x 1.5 with an appropriate degree of protection must be used
- 4. When wiring, please ensure that no cables are located within the range of the lever system
- The inside of the switch must be imperatively cleaned (e.g. removal of cable residues), considering that foreign bodies can affect the switching behaviour
- Unused cable entries must be sealed by means of locking screws, included in delivery (tightening torque 4 Nm)
- 7. The cover screws must be tightened uniformly (tightening torque 1 Nm)

# Accessories cable gland


Ordering code: Authorised cable diameter: Tightening torque: 103006011 6 ... 12 mm 8 Nm

### Settle length x of the conductor: 6 mm



## 4.2 Contact Options

Contacts shown in a de-energised condition. Pin assignment of versions with M12 connector shown in brackets. All NC contacts have positive break  $\ominus$ .

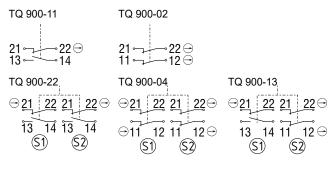

### Key

⊖ Positive break NC contact

## 5. Set-up and maintenance

### 5.1 Functional testing

The function of the component must be tested.

The following conditions must be previously checked and met:

- 1. Correct fixing of the pull-wire switch
- 2. Check the integrity of the cable entry and connections
- Check the switch enclosure for damage
- 4. Check the functionality of the switch by actuating the wire
- 5. Check the cable tensioning by means of the position indicator

### 5.2 Maintenance

A regular visual inspection and functional test, including the following steps, is recommended:

- 1. Check the wire tension through the wire position indication and check the wire and the wire guides for damages and proper fitting
- 2. Check the functionality of the switch by actuating the wire
- 3. Check the cable entries and the wire connections
- 4. Remove particles of dust and soiling



Do not open the enclosure under tension.

Damaged or defective components must be replaced.

## 6. Disassembly and disposal

## 6.1 Disassembly

The switch must be disassembled in a de-energised condition only.

### 6.2 Disposal

The switchgear must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.



7. EU Declaration of conformity

Original	ACE Schmersal Eletroeletrônica Industrial Ltda. Av. Brasil, nº 815 Jardim Esplanada CEP: 18557-646 Boituva – SP Brazil Internet: www.schmersal.com.br
We hereby certify that the hereafter describ to the applicable European Directives.	bed components both in their basic design and construction confo
Name of the component:	TQ 900
Туре:	See ordering code
Description of the component:	Pull-wire switches
Relevant Directives:	2014/35/EU Low Voltage Directive 2011/65/EU RoHS-Directive
Applied standards:	EN 60947-5-1:2017 + AC:2020
Person authorised for the compilation of the technical documentation:	Oliver Wacker Möddinghofe 30 42279 Wuppertal
Place and date of issue:	Boituva, May 16, 2024
	Middata
	Authorised signature Marco Antonio De Dato Head of Engineering and Design

K.A. Schmersal GmbH & Co. KG Möddinghofe 30, 42279 Wuppertal Germany Phone: +49 202 6474-0

Fax: +49 202 6474-100 E-Mail: info@schmersal.com Internet: www.schmersal.com

downloaded from the internet at products.schmersal.com.

Production site: ACE Schmersal Eletroeletrônica Industrial Ltda. Av. Brasil, nº 815 Jardim Esplanada - CEP: 18557-646, Boituva - SP Brazil Phone: +55 - (0)15 - 32 63 - 9866 +55 - (0)15 - 32 63 - 9890 Fax: E-Mail: vendas@schmersal.com.br Internet: www.schmersal.com.br

(EN)

