

1. About this document

1.1 Function

These operating instructions provide all the information required for mounting, set-up and commissioning to ensure the safe operation and disassembly of the switchgear. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

1.2 Target group: authorised qualified personnel

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

1.3 Explanation of the symbols used

Information, hint, note:

This symbol is used for identifying useful additional

Caution: Failure to comply with this warning notice could lead to failures or malfunctions. Warning: Failure to comply with this warning notice could

lead to physical injury and/or damage to the machine.

The Schmersal range of products is not intended for private consumers.

The products described here were developed to adopt control and display functions as part of a complete system or machine. It is the responsibility of the manufacturer of a machine or plant to ensure the correct functionality of the entire machine or plant.

The products must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

1.5 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country specific installation standards as well as all prevailing safety regulations and accident prevention rules.

> Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: products.schmersal.com.

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

1.6 Warning about misuse

In case of inadequate or improper use or manipulations of the component, personal hazards or damage to machinery or plant components cannot be excluded. The relevant requirements of the standard EN ISO 13850 must be

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories. For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden, the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.



40 mm 42 mm

45 mm 50 mm

55 mm

70 mm

40

42 45

50

55 70

E program, N program and R program

2. Pr	oduct descript	ion	No.	Option	Description
	dering code		(4)	Toggle length	
These	operating instruc	tions apply to the following types and programs:		without	Short toggle
				.1	Long toggle
2.1.1		f the command devices	5	Colour of tog	
	Basic	Description		without	grey
	component			WS	white
			6		al position (3 pos
				1	Position left
		and the illuminated pushbuttons:		2	Position middle
	1DT82	Pushbutton		3	Position right
	(1)DM(2)	Pushbutton with diaphragm for dust protection	7		al position (2 pos
	10L82	Illuminated pushbutton		1	Position left
	(1)DLM(2)	Illuminated pushbutton with diaphragm		2	Position right
		for dust protection	8		ohragm (only N pr
	Indicator ligh			without	white
	1)ML2	With flat collar		GR/	black
	10MLH2	With high collar		BL/	blue
		ead impact button:			
	1DP382	without latching			
	1DTP382	Without latching (only N program)			
	10LP382	Illuminated, without latching (only N program)	2.1.2	Contact element	s of EF contact sy
	1DR382	With latching, unlock by turning		Basic	Description
	1DRR382	With latching, unlock by turning and pulling		component	
		(pulling only in N program)			
	1DRZ382	With latching, pull to unlock			- with screw ter
	Selector swit			EF10.3	Contact element
		- with 2 positions:		EF02.3	Contact element
	1WS2145	2 maintained positions		EF110.3	Double contact e
	1WT2145	1 momentary position		EF022.3	Double contact e
		- with 3 positions:		EF102.3	Double contact e
	1WS3245	3 maintained positions		EF102S.3	Double contact e
	1WT3245	2 momentary positions, left and right			with safety spring
	1WST3245	Switching, latching			- with flat plug-i
	1WTS3245	Latching, switching		EF10F.3	Contact element
	Key-operated	selector switch:		EF0@F.3	Contact element
		- with 2 positions:		EF110F.3	Double contact e
	①SS21S⑦	2 maintained positions		EF022F.3	Double contact e
	①ST21S⑦	1 momentary position		EF102F.3	Double contact e
		- with 3 positions:		EF102SF.3	Double contact e
	①SS32S⑥	3 maintained positions			with safety spring
	①ST32S⑥	2 momentary positions, left and right			- with cage clam
	①SST32S⑥	Switching, latching		EFK10.3	Contact element
	①STS32S⑥	Latching, switching		EFK02.3	Contact element
		for command device position:		EFK110.3	Double contact e
	NB, MBN, BN	Blanking plug		EFK022.3	Double contact e
No.	Option	Description		EFK102.3	Double contact e
		· · · · · · · · · · · · · · · · · · ·			
1	Command an	d signalling devices:			
	E	"E" program	No.	Option	Description
	N	"N" program			
	R	"R" program	1	1	Normally-closed
2	Colour of but	ton surface:		2	with approx. co
	GB	yellow		3	
	RT	red	2	1	Normally-open
	GN	areen	1	2	with approx

)	Toggle len	Toggle length in mm:			
	without	Short toggle			
	.1	Long toggle			
)	Colour of t	Colour of toggle			
	without	grey			
	WS	white			
)	Key-withd	Key-withdrawal position (3 positions):			
	1	Position left			
	2	Position middle			
	3	Position right			
)	Key-withd	Key-withdrawal position (2 positions):			
	1	Position left			
	2	Position right			
D	Colour of c	liaphragm (only N program):			
	without	white			
	GR/	black			
	BL/	blue			

ystem (for E and N program)

component	
	- with screw terminals
EF10.3	Contact element NC
EF02.3	Contact element NO
EF110.3	Double contact element 2 NC
EF022.3	Double contact element 2 NO
EF102.3	Double contact element NC/NO
EF102S.3	Double contact element NC/NO contacts
	with safety spring
	- with flat plug-in connector
EF10F.3	Contact element NC
EF0@F.3	Contact element NO
EF110F.3	Double contact element 2 NC
EF022F.3	Double contact element 2 NO
EF102F.3	Double contact element NC/NO
EF1002SF.3	Double contact element NC/NO
	with safety spring
	- with cage clamps
EFK①0.③	Contact element NC
EFK02.3	Contact element NO
EFK①①0.③	Double contact element 2 NC
EFK022.3	Double contact element 2 NO
EFK102.3	Double contact element NC/NO

Command and	a signalling devices:			
E	"E" program	No.	Option	Description
N	"N" program			
R	"R" program	1	1	Normally-closed contact,
Colour of butt	on surface:		2	with approx. contact travel in mm
GB	yellow		3	
RT	red	2	1	Normally-open contact,
GN	green		2	with approx. contact travel in mm
WS	white		3	
BL	blue		4	
GR	grey	3	1	Mounting position on mounting flange /
BK	black (not for illuminating devices)		2	terminal ID
Head diameter	r of mushroom head impact button		3	
30	30 mm			
35	35 mm			

3

2.1.3 Contact elements of RF contact system (for R program)

Basic component	Description	
	- with screw terminals	
RF103	Contact element NC	
RF023	Contact element NO	

No.	Option	Description
1	1	Normally-closed contact, with approx. contact travel in mm
2	3	Normally-open contact, with approx. contact travel in mm
3	without	Mounting position 1st level / terminal ID
	.1	Mounting position 2nd level / terminal ID

2.1.4 Light elements of EF contact system (for E and N program) Basic Description

component	
EL13	Voltage sensor for lamps Ba9S
ELE13	Voltage sensor for LED Ba9S
ELT3/3	Voltage sender with transformer
	(primary/secondary)
ELDE.N23	Light element with screw terminals and
	integrated LED
ELDEK23	Light element with cage clamps and
	integrated LED
ELDE.N-2-2-	3 colour LED module with screw terminals
2-24VDC	

No.	Option	Description
(1)	Without	Screw terminal
0	F	Flat plug-in connector
	К	Cage clamps
2	GB	Yellow
	RT	Red
	GN	Green
	WS	White
	BL	Blue
3	6	Voltage 6 V
	Without or 24	Voltage 24 V
	48	Voltage 48 V
	230	Voltage 115 230 VAC

2.1.5 Light elements of RF contact system (for R program)

Basic component	Description
RL RLDEWS24	Voltage sensor for lamps Ba9S Light element with screw terminals and integrated white LED

2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

2.3 Purpose

The devices described in these operating instructions are not suitable for emergency stop applications. Emergency stop command devices are described in a separate set of operating instructions.

The devices described here are designed to be mounted in control panels or assembly housings. The command devices are only suitable for processing operation-relevant signals for purposes of machine control.

If sealing elements or dust protection membranes are not closed they could be damaged by cleaning agents and permanent UV exposure.

2.4 Technical data Command and signalling devices:

Command and signalling devices: General technical data:	
Design:	rour
Installation diameter:	22.3 m
Spacing:	40 × 50 mr
- Selector switch, mushroom head	40 ^ 30 111
impact button with latching:	50 × 60 m
Front plate thickness:	
- with identification label:	1 5 m
Mounting position:	ar
Switching frequency:	1,000 4 mm 5 m
Actuating stroke:	4 ጠጠ 3 ጠ
Actuating force:	
- Pushbutton:	approx. 1.5
- Pushbutton with diaphragm:	approx. 2.0
- Illuminated pushbutton:	approx. 1.5
- Mushroom head impact button:	approx. 2.0
 Key-operated selector switch: 	approx. 0.2
 Spring-return rotary selector switch/ 	
maintained spring-return rotary selector swit	ch: approx. 0.2
Mechanical life:	
- Push button:	1 x 10 ⁶ switching cycle
 Illuminated push button: 	1 x 10 ⁶ switching cycle
 Palm button with detent: 	1 x 10 ⁵ switching cycle
 Palm button without detent: 	1 x 10 ⁶ switching cycle
- Key selector switch/button/selector switch:	1 x 10 ⁵ switching cycle
- Selector switch/button/selector switch/	
key switch:	3 x 10 ⁵ switching cycle
Calotte/collar material:	
- N program:	Plast
- E and R program:	Glass and plast
Front ring material:	
- N program:	Plastic chrome-plate
- E and R program:	Aluminium, anodise
Button material:	
- N program:	Plast
- E and R program:	Aluminium, anodise
Selector switch grip material:	
- N program:	Plast
- E and R program:	Plast
Degree of protection:	
- N program:	IP67, IP69
- E and R program:	IP6
Ambient temperature:	–25°C + 75°
- Selector switch, key-operated selector switc	
Fixing with mounting flange:	ELM, EF
Max. tightening torque of mounting flange:	0.6 N
Resistance to shocks to EN 60068-2-27:	< 50
Resistance to vibration in accordance with EN	
Device designation:	N 60068-2-6: 5
- Designation labels:	Loopr stated or angress
0	Laser-etched or engrave l, laser-etched or engrave
- Symbols: Printed	

Contact/light element:		3. Mounting
General technical data:		
Standards:	EN 60947-5-1	3.1 General mounting instructions for E and N program
Switching frequency:	1,200/h	
Mechanical life:	10,000,000 operations	1. Mount control elements and mounting flange by tightening both
Resistance to shock:	30 g / 18 ms	screws of mounting flange using size 2 slotted screwdriver
Resistance to vibration:	20 g/10 150 Hz	(see fig. 1)
Switching points:	depending on contact element usedLokal	
- NC contact:	ca. 1 mm 3 mm	When tightening the screws, ensure the mounting flange is
- NO contact:	ca. 2 mm 4 mm	screwed on evenly and does not move.
Switching system:	Slow action,	
	NC contacts with positive break	
	with galvanically separated contact bridges	2. Mount contact elements of EF contact system by snapping on in
Thermal test current I _{the} :		positions 1 to 3 to mounting flange (see Fig. 2). Middle position
- EF contact elements:	10 A	(pos. 3) is reserved for mounting lighting elements on devices with
- RF contact elements:	6 A	lights (see fig. 3).
Max. fuse rating:		
- EF contact elements:	10 A gG	On devices with lights, no plunger segments may be installed
- RF contact elements:	6 A gG	in the mounting hange. It using contact and light elements on
Suitable low voltage:		the mounting flange, the light element must be mounted first
- EF contact elements:	5 VDC / 3.2 mA	and in the middle position (pos. 3).
- RF contact elements:	5 VDC / 1 mA	
Utilisation category:		Contact elements of the EF contact system must be fitted in
- EF contact elements:	AC-15: 250 V / 8 A	the second locking position and must, therefore, lie flush on
	DC-13: 24 V / 5 A	the mounting flange after fitting.
- RF contact elements:	AC-15: 250 V / 6 A	
	DC-13: 24 V / 3 A	
Rated insulation voltage U _i :	400 V	
Rated impulse withstand volt		
Degree of pollution:	3	
Overvoltage category:		
Climatic resistance:	to EN 60068 Part 2-30	
Temperature range:	−25 °C + 60 °C	
Proof of positive opening:	2.5 kV impulse voltage	
Positive break travel:	approx. 2 mm after the opening point	
Actuating force at end of stro	oke: approx. 8 15 N, depending on contact element used	
Connection:	Screw terminals	a//
Connocion.	Plug-in terminals	
	Cage Clamp connection	
Cable section:		
- single-strand wire:	2 x (0.5 … 2.5 mm²)	
- multi-strand wire with condu		
- Flat plug-in connector:	6.3 mm x 0.8 mm /	
- F J	2 x 2.8 mm x 0.8 mm	Fig. 1
Tightening torque for the con		
Material:	-	
- enclosure:	plastic, glass-fibre reinforced thermoplastic, self-extinguishing	
- contacts:	fine silver, spring bronze or brass carrier	
Degree of protection:		
- Wiring compartments:	IP40	
- Terminals:	IP20	
(with plug-in connect	ctor depending on the connector plug used)	
(with plug-in connect Approvals:	ctor depending on the connector plug used) cULus (save cage clamp connection)	Fig. 2 Fig. 3

Only fit onto clean and grease-free surface!

Ţ

E program, N program and R program

3.2 Special assembly instructions for hygienic applications For hygiene-related devices of the N series, which are mounted and can be used in water splash areas or non-food areas, the following additional requirements with regard to the installation are to be observed:

- The devices must be arranged in such a way that cleaning with a cloth is possible in each position and when the switch is not actuated. It is therefore recommended to maintain a distance of 70 mm from mounting hole to mounting hole
- in order to ensure the normative distance of > 20 mm.
- 2. If the device is enclosed on one or more sides by a housing wall, a radius of 100 mm from the centre of the mounting hole must be adhered to so that the device can be cleaned from all sides using a cloth and can be checked from all sides for damage.

Please observe the relevant applicable standards and their engineering principles regarding this.

Only fit onto clean, grease-free surface! When installing the device, ensure that the surface is flat and that there are no weld seams or bending radii of 100 mm around the device. Otherwise, the leak-tightness and hygiene properties of the device could be compromised.


3.3 General mounting instructions for R program

1. Mount control elements and mounting flange by tightening both screws of mounting flange using size 2 slotted screwdriver (see section 3.1, Fig. 1)



When tightening the screws, ensure the mounting flange is screwed on evenly and does not move.

 Mount contact elements of RF contact system by snapping on in positions 1 to 3 to mounting flange (see fig. 4). Middle position (pos. 3) is reserved for mounting lighting elements on devices with lights (see fig. 5).

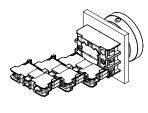

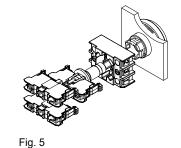


Fig. 4

l

On devices with lights, no plunger segments may be installed in the mounting flange.

Contact elements of the RF contact system are fitted in the first locking position and, therefore, lie flush on the mounting flange after fitting. If using contact and light elements on the mounting flange, the light element must be mounted first and in the middle position (pos. 3). No contact element may be mounted to the light element.




Only fit onto clean and grease-free surface!

3.4 Dimensions


All measurements in mm.

EF contact system (for E and N program)

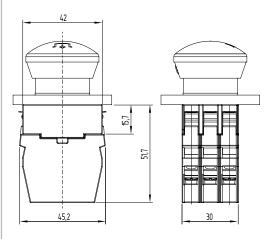



RF contact system (E, N and R program)

Single row contact elements

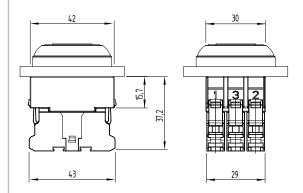


Double row contact elements

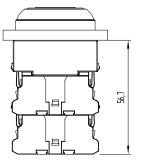

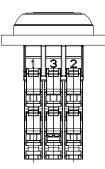

A maximum of 4 contact elements may be used on devices with latching. The fourth element must be mounted in the centre (pos. 3).

Mounting flange and blanking plug

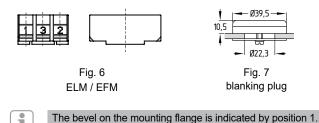

E program, N program and R program

4. Electrical connection

4.1 General information for electrical connection

\triangle	The electrical connection may only be carried out by authorised personnel in a de-energised condition.
	After wiring, the contact elements must be cleaned (i.e. remove excess cables etc.).
	The clamping screws of the connecting cable must be tightened with 1 Nm tightening torque.

Settle length x of the conductor:

- on cage clamp connections of type s or f:5 ... 6 mm- on screw terminals:7 mm

4.2 Contact variants of contact system

Refer to ordering code, chapter 2.1

 $\underline{\mathbb{N}}$

A mixture of different contact systems is not permissible. With the R program, use of an EF contact system is not permissible.

5. Set-up and maintenance

5.1 Functional testing

The function of the component must be tested. The following conditions must be checked and met:

- 1. Correct fixing of the fitted component
- 2. Check the integrity of the connections
- 3. Check the command device for damage

5.2 Maintenance

A regular visual inspection and functional test, including the following steps, is recommended:

- 1. Check the correct fixing of the command device and the contact element
- 2. Remove particles of dust and soiling
- 3. Check the integrity of the connections

Damaged or defective components must be replaced.

5.3 Cleaning and care

Certified cleaners and care products along with their main ingredients can be gleaned from the list at the end of the chapter. The cleaning agents have been tested in a standardised Ecolab procedure or in an alternative Storage test. With these tests, a 100% guarantee is given that the device will not be exposed to damage during its service life from the cleaning agents that are used. A change in colour to the parts is no indication of a quality defect.

If other cleaning agents are used with the same or similar ingredients, no liability will be accepted for damage to the device. Responsibility for this lies solely with the operator of the machine or plant system. The same applies to mixtures of different cleaning agents, irrespective of whether they are listed or not

or whether the cleaners have similar ingredients. This also applies to incomplete removal of cleaning agents after the cleaning stage.

/!\

1

During the course of cleaning, the boot assembly should be checked before and after cleaning for damage and renewed if necessary.

The device should only be cleaned at temperatures below 80 °C. Observe temperature change specification.

Product	Description	Concentration	PH value (1%)	Main ingredients
Topactive 500	Foam cleaner, acidic	5%	1.7 - 2.1	Phosphoric acid, surfactant
Aciplusfoam VF59	Foam cleaner, acidic	5%	2	Phosphoric acid, surfactant, nitric acid
P3 – Topactive DES	Foam cleaner, acidic	3%	3.2 - 3.6	Hydrogen peroxide, acetic acid, peracetic acid, surfactants
VE – Water	Completely desalinated water	100%	5 - 6	Demineralised water
P3 – Alcodes	Acetic acid, alkylamine oxide	100%	6.8 - 7.8	Ethanol
Р3 – Торах 990	Disinfectant, neutral	3%	7.4 - 8.4	Acetic acid, alkylamine oxide
Tego 2000 VT25	Disinfectant, neutral	1%	8	Amphotenside
Divodes FG VT29	Disinfectant, neutral	100%	8.8	Alcohol
Р3 - Торах 66	Foam cleaner, alkaline	3%	11.6 - 12	Surfactants, phosphonates, sodium hypochlorite
Oxofoam VF5	Foam cleaner, highly alkaline	5%	12.7	Potash, surfactant, sodium hypochlorite
Powerfoam VF4	Foam cleaner, highly alkaline	5%	12.8	Caustic soda, EDTA, surfactant
Topactive 200	Foam cleaner, alkaline	5%	12.8 - 13.2	Ethanol, sodium hydroxide, potassium hydroxide, surfactants

(EN)

6. Disassembly and disposal



The devices must be disassembled in a de-energised condition only.


6.1 Removal of E, N and R program

 Removal of the EF contact elements is carried out with the aid of a size 2 slotted screwdriver (see fig. 8).
 Removal of the RF contact elements is carried out with the aid of a slotted screwdriver with the recommended width of 5.5 mm (see Fig. 9).

1

With the light element mounted, the contact elements at pos. 1 and pos. 2 must be removed first. The light element is then removed.

 Removal of the mounting flange is carried out by loosening the screws on the mounting flange. The mounting flange is then turned approx. 45° in anti-clockwise direction and removed (see fig. 10).

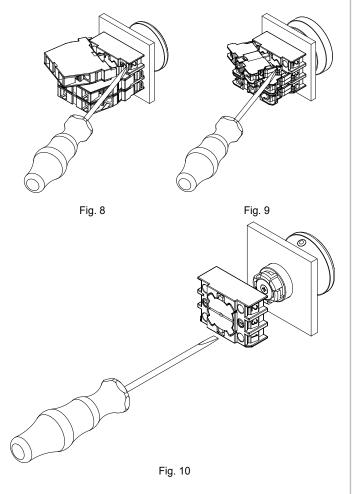

6.2 Disposal



The switchgear must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.

7. EU Declaration of conformity

We hereby certify that the hereafter described components both in their basic design and construction conform to the applicable European Directives.



Applied standards:

EN 60947-5-1:2017 + AC:2020



The currently valid declaration of conformity can be downloaded from the internet at products.schmersal.com.

8. Contact / Manufacturer

Information about the manufacturer and country of origin can be found on the packaging label.

K.A. Schmersal GmbH & Co. KG

Möddinghofe 30, 42279 Wuppertal Germany Phone: +49 202 6474-0 Telefax: +49 202 6474-100

E-Mail: info@schmersal.com Internet: www.schmersal.com

Schmersal India Private Limited

G-7/1, MIDC, Ranjangaon Taluka Shirur, Dist. Pune – 412 220 Maharashtra India Phone: +91 21 38614700 E-Mail: info-in@schmersal.com Internet: www.schmersal.in

Schmersal Inc.

8545 Challenger Drive Indianapolis, IN 46241 USA Phone: +1-888-496-5143 Fax: +1-914-347-1567 E-Mail: infousa@schmersal.com Internet: www.schmersalusa.com