



EN Operating Instructionspages 1 to 4
Original

Content

1 About this document	
1.1 Function	1
1.2 Target group: authorised qualified personnel.	1
1.3 Explanation of the symbols used	1
1.4 Appropriate use	1
1.5 General safety instructions	1
1.6 Warning about misuse	1
1.7 Exclusion of liability	1
2 Product description	
2.1 Ordering code	2
2.2 Special versions.	2
2.3 Purpose	2
2.4 Technical Data	2
3 Mounting	
3.1 General mounting instructions	2
3.2 Dimensions	2
3.3 Mounting set-up and actuating distances	3
4 Electrical connection	
4.1 General information for electrical connection.	3
4.2 Adjustment.	3
5 Set-up and maintenance	
5.1 Functional testing.	3
5.2 Maintenance	3
6 Disassembly and disposal	
6.1 Disassembly.	3
6.2 Disposal	3
7 EU Declaration of conformity	

1. About this document

1.1 Function

This operating instructions manual provides all the information required for the mounting, set-up and commissioning to ensure the safe operation and disassembly of the switchgear. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

1.2 Target group: authorised qualified personnel

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

1.3 Explanation of the symbols used



Information, hint, note:

This symbol indicates useful additional information.



Caution: Failure to comply with this warning notice could lead to failures or malfunctions.

Warning: Failure to comply with this warning notice could lead to physical injury and/or damage to the machine.

1.4 Appropriate use

The product must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

1.5 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country specific installation standards as well as all prevailing safety regulations and accident prevention rules.



Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: products.schmersal.com.

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

1.6 Warning about misuse



In case of inadequate or improper use or manipulations of the component, personal hazards or damage to machinery or plant components cannot be excluded.

1.7 Exclusion of liability

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden, the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

2. Product description

2.1 Ordering code

This operating instructions manual applies to the following types:

BN 325-R①-②-③

No.	Option	Description
①	G	without LED with LED
②		Cable output
③	LST	Cable with connector M12
		Blade terminal 4,8 mm and 1 shielding plate
1239		Blade terminal 4,8 mm and 2 shielding plates
1389		Blade terminal 6,3 mm and 2 shielding plates
1279		Cable outlet left and 2 shielding plates
1279-2		Cable outlet right and 2 shielding plates



Only if the information described in this operating instructions manual are realised correctly, the compliance with the Low Voltage Directive is maintained.

2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

2.3 Purpose

Magnetic switches are preferably used wherever mechanically operated limit switches do not feature a satisfactory operation due to the unfavourable operating conditions. In the elevator industry, magnetic switches are preferably used for positioning and control purposes.

For actuating the magnetic switches, the actuating magnets listed by Schmersal (refer to Automation technology catalogue) can be used. Depending on the chosen combination of magnetic switch and actuating magnet, the switching distances and travels may vary.

2.4 Technical Data

Enclosure and cover: glass-fibre reinforced thermoplastic

Protection class:

- Ordering suffix -1239 and -1389: IP00

- Ordering suffix -1279 and -1297-2: IP67

Termination:

- Ordering suffix -1239: Blade terminal 4.8 mm

- Ordering suffix -1389: Blade terminal 6.3 mm

- Ordering suffix -1279 and -1279-2: Cable outlet

- Ordering suffix -LST: Cable with connector M12

Operating principle: magnetic

Switching voltage: max. 250 VAC

Switching current: max. 3 A

Switching capacity: max. 120 VA

Sparkover voltage: > 600 VAC (50 Hz)

Switching speed: max. 18 m/s

Switching frequency: max. 300 /s

Switching time "Close": max. 1.5 ms

Switching time "Open": max. 0.5 ms

Bounce duration: 0.3 ... 0.6 ms

Ambient temperature: - 25 °C ... + 75 °C

Mechanical life: 1 billion operations

Electrical life: 1 million - 1 billion operations, depending on load

Resistance to shock: 50 g / 11 ms

Resistance to vibration: 30 g on sine wave oscillation

Resistance to vibration: 10 ... 55 Hz, amplitude 1 mm

Switching point accuracy: ± 0.25 mm, T = constant

3. Mounting

3.1 General mounting instructions



The installation may only be carried out by authorised personnel.

- Any mounting position.
- Do not install the magnetic switch and the actuating magnet in strong magnetic fields
- Keep away from metal chips
- Do not expose the magnetic switch and the actuating magnet to strong vibrations and heavy shocks
- Do not use the magnetic switch and the actuating magnet as end stop
- The mounting distance between two sensors should always be at least 30 mm.




When using more than one magnet switch, consider figures next page.


3.2 Dimensions

All measurements in mm.

Blade terminal

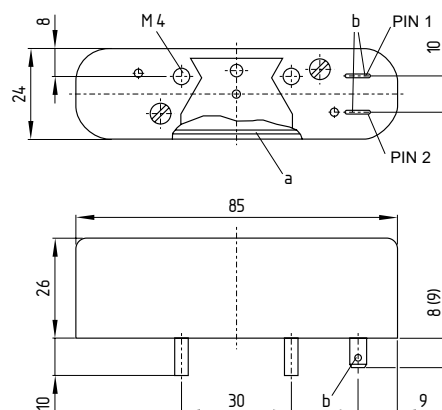

Cable outlet

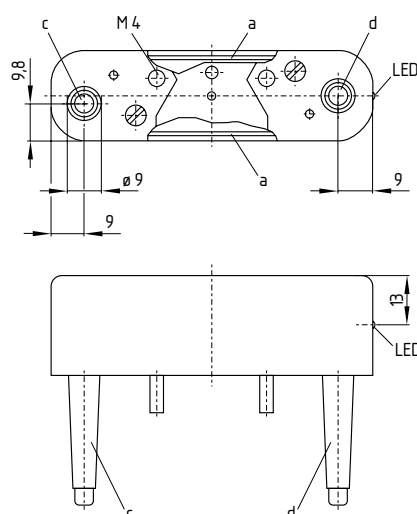


Key


- a Shielding plate
- b Blade terminal
- c Cable outlet left (Index -1279)
- d Cable outlet right (Index -1279-2)

3.3 Mounting set-up and actuating distances


Positioning of the switches when using more than one magnet switch (actuating distance for all BN 325 with 2 shielding plates at -20 °C ... +50 °C)

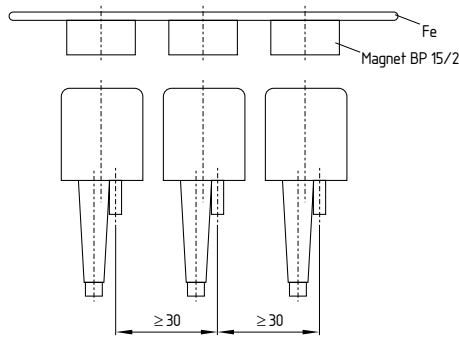

Achievable switching distance, even by offset of the actuating magnet

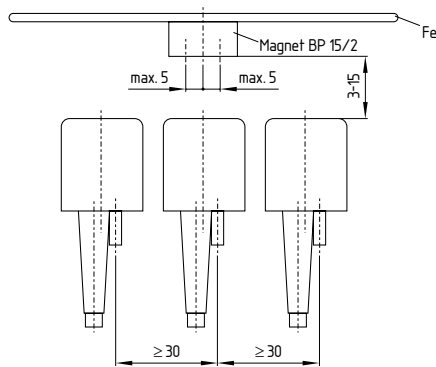

Maximum side-ways offset of two actuating magnets, whereby the middle switch will not be affected.

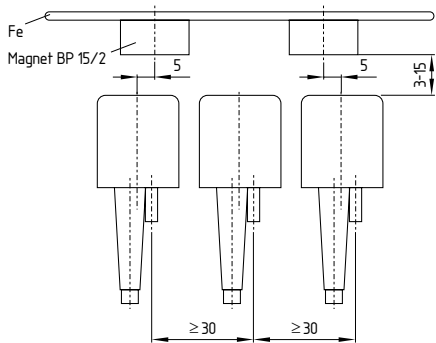

The specified switching distances are applicable for the actuation of individually mounted components without ferromagnetic influence. A change of the distance, either positive or negative, is possible due to ferromagnetic influences. The mutual interference between multiple actuating magnets must be observed. (For special versions: diverging values possible)

Magnetic switches with bistable contacts will only function correctly, when a magnetic north (green) or south (red) pole goes past the active surface. The opening and closing functions depend on the direction of actuation, the actuating magnets and the polarity of the actuating magnets.



Further information concerning switch distances can be found in the Schmersal Automation Technology catalogue or in the online catalogue on the Internet: products.schmersal.com.


4. Electrical connection

4.1 General information for electrical connection




The electrical connection may only be carried out by authorised personnel in a de-energised condition.


BN 325-R
BN 325-R-1239
BN 325-R-1389




BN 325-R-1279
BN 325-R-1279-2





BN 325-RG-1279
BN 325-RG-1279-2



BN 325-R-LST-1279



BN 325-RG-LST-1279



Inductive loads (e.g. contactors, relays, etc.) are to be provided with suitable interference suppression circuitry.

4.2 Adjustment

In order to actuate the BN 325-R/-RG magnetic switch, a north or south pole magnet should be used. The markings found on the actuating side of the cover are used for adjusting the magnet to the switch. The coloured symbols including arrows, show the proper magnet arrangements and the actuating direction. The magnets have the corresponding coloured markings.

5. Set-up and maintenance

5.1 Functional testing

The function of the component must be tested. The following conditions must be previously checked and met:

1. Check the correct fixing of the magnetic switch and the actuating magnet
2. Integrity of the magnetic switch and the actuating magnet
3. Check the switch enclosure for damage
4. Check the functionality of the switch

5.2 Maintenance

A regular visual inspection and functional test, including the following steps, is recommended:

1. Check the functionality of the switch
2. Remove particles of dust and soiling

Damaged or defective components must be replaced.

6. Disassembly and disposal



6.1 Disassembly

The switch must be disassembled in a de-energised condition only.

6.2 Disposal

The switch must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.

7. EU Declaration of conformity

EU Declaration of conformity		 SCHMERSAL
Original	SCHMERSAL Industrial Switchgear (Shanghai) Co., Ltd. Cao Ying Road 3336 201712 Shanghai / Qingpu P.R.CHINA http://www.schmersal.com.cn	
We hereby certify that the hereafter described components both in their basic design and construction conform to the applicable European Directives.		
Name of the component:	BN 1..., BN 2..., BN 3..., BN 6..., BN 7..., BN 8...	
Description of the component:	Magnetic reed switch	
Relevant Directives:	2014/35/EU Low Voltage Directive 2011/65/EU RoHS-Directive	
Place and date of issue:	Shanghai, 24 March, 2021	
SISS-BN1xx-8x-I-EN		
	Authorised signature Michele Seassaro Managing Director	



The currently valid declaration of conformity can be downloaded from the internet at products.schmersal.com.



K.A. Schmersal GmbH & Co. KG
Möddinghofe 30, 42279 Wuppertal
Germany
Phone: +49 202 6474-0
Telefax: +49 202 6474-100
E-Mail: info@schmersal.com
Internet: www.schmersal.com

Production site:

SCHMERSAL

Industrial Switchgear (Shanghai) Co., Ltd.
Cao Ying Road 3336
201712 Shanghai / Qingpu, P.R.CHINA

Phone: +86 21 63758287
Fax: +86 21 69214398
E-Mail: info@schmersal.com.cn
Internet: www.schmersal.com.cn

施迈赛工业开关制造（上海）有限公司
地址：上海市青浦区漕盈路3336号
邮编：201712

电话：021 63758287
传真：021 69214398

网址： www.schmersal.com.cn